




## INSTALLATION PROCEDURE

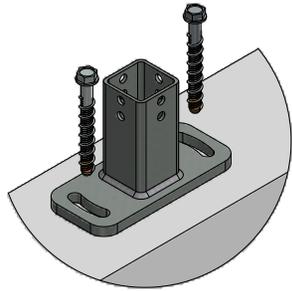


step 1

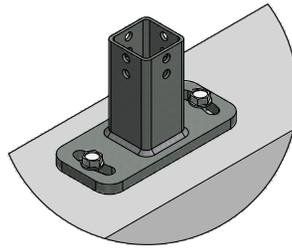

step 2

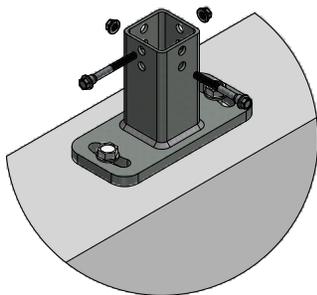


step 3

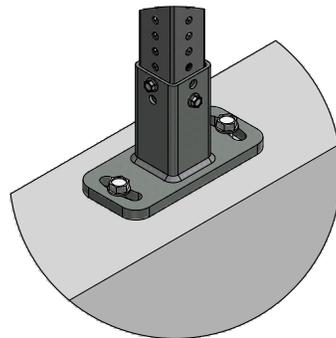


step 4

1. Read all instructions thoroughly before proceeding. Make sure all parts from parts list are taken out to the installation location, along with a drill capable of drilling a 5/8" diameter hole into the 3000 psi minimum strength concrete barrier. Make sure to use all standard safety protocols such as safety glasses and being careful of traffic. Drill a hole centered on the top of the barrier 6" deep. Attach the ICBM (A) with one of the threaded wedge anchor bolts (B) going through one of the radius slots in the ICBM baseplate, and with the bolt only about 3" into the hole. Align the ICBM so it is parallel with the concrete barrier. Drill a second hole 6" deep using the other radius slot as a guide centering it as much as possible.
2. Install the second threaded wedge anchor bolt (B) and using the base plate slots, orient the ICBM now to accommodate any angle desired to account for sign reflection and visibility for the traveling public. Tighten both threaded wedge anchor bolts. If you intend to use an additional threaded wedge anchor bolt through center hole in plate (accessible at bottom of post receiver tube), then drill that hole now - also 6" deep. After making sure that all bolts are installed and tight, proceed to step 3.
3. Gather the Flanged Shoulder Bolts (C) and Flange Nuts (D) and visualize how they will be installed. Prepare sign assembly and have ready for the last step. If a next size smaller insert post is being used, for additional sign area capacity, insert it into the bottom of the main sign post now.
4. Insert the bottom of the square sign post into the ICBM post receiver and install the Flanged Shoulder Bolts (C) and Flange Nuts and tighten them. After everything is checked and done, safely leave the installation site.

ICBM4510-2\_0-G

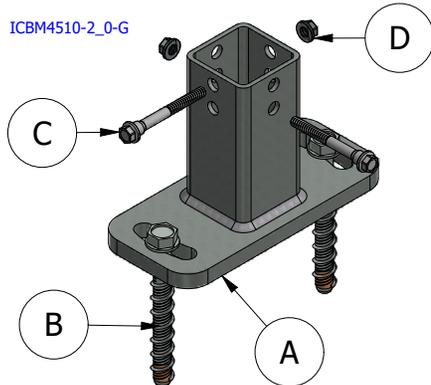

3rd anchor bolt option (sold separately)

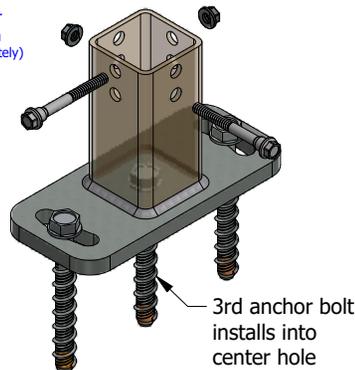

### PARTS LIST

- A INDEXABLE CONCRETE BARRIER MOUNT BRACKET - (with receiver for 2" or receiver for 2-1/2" square sign post)
- B THREADED WEDGE ANCHOR BOLT - (5/8" x 6") (two included in kit)
- C 3/8" x 3-1/2" GR. 8 FLANGED SHOULDER BOLT - (two included in kit)
- D 3/8" CASE-HARDENED FLANGE NUT - (two included in kit)